

# The Box

Ken Leister

610-724-3488

Kenapeq@aol.com

## TIP

1. Clamp Front + Back Together and drill all holes at one time. ( $\frac{3}{16}$  Thru holes) Keep bottoms of Front + Back even. Keep 12° cut sloping the same way.
2. Holes in the Roof must be angled @ 12°
3. If using 3" material you may use 1 1/4" screws for Bottom and Cleat on Roof
4. If something is not clear - call me.




To Do The Short Box:

Shorten The

Back - Front - Solid Side + Door

By  $3\frac{1}{2}$ " - everything else stays the same.

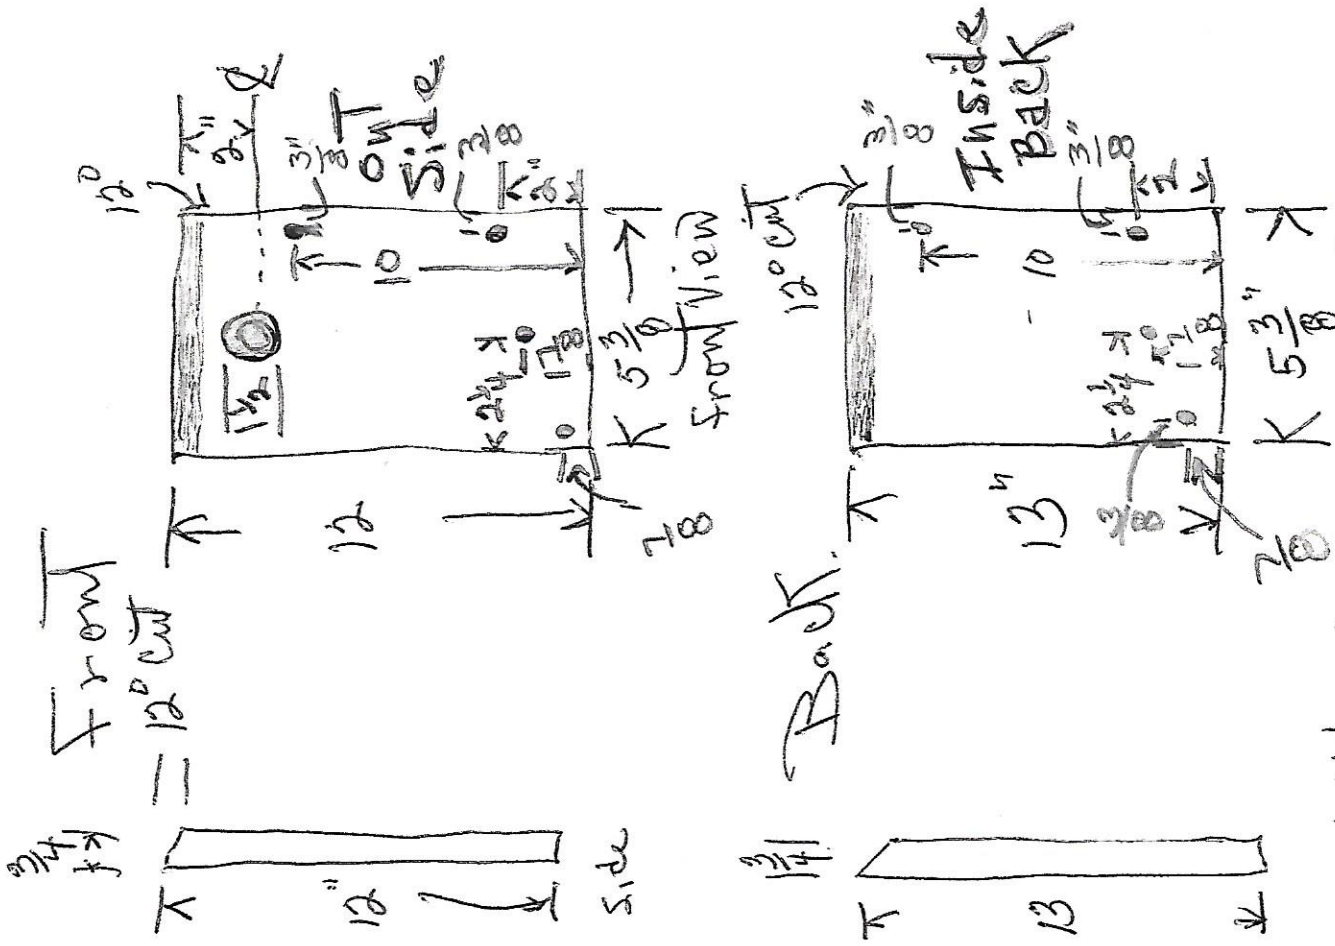

All Holes Are  $\frac{3}{16}$  Thru Holes -

use 1 1/4" ~~1 1/4"~~ <sup>Crown</sup> Thread Screws - Dry-wall -